

BIN/HOPPER VIBRATORS

GENERAL ARRANGEMENT

Model	A ¹	B	C	D	E	F	G ²	H	J	K ³	Wt. (Lbs.)
BH-1"	1/2	1/2	3-3/4	1-3/4	3-1/2	4-1/2	*	2	1/4	1/4	3
BH-1-1/4"	1/2	3/4	5-5/8	3	4-1/2	6	*	2-1/2	1/4	1/4	8
BH-1-5/8"	5/8	1	7-1/4	3-3/4	7-1/2	9	*	3-1/4	1/4	1/4	18
BH-2"	5/8	1	7-1/4	3-3/4	7-1/2	9	*	3-1/4	1/4	1/4	20
BH-3"	7/8	1-1/8	9-1/2	5	7-3/4	10-1/2	3-1/4	5	3/8	3/8	50
BH-3"-L	7/8	1-1/2	12	6-1/4	7-3/4	10-1/2	3-1/4	5	3/8	3/8	64
BH-4"	1	1-1/4	11-3/4	5-7/8	12	14-1/2	4	6-1/2	1/2	1/2	105
BH-5"	1	2	16-1/2	8-1/2	12	14-1/2	4	7-1/4	1/2	1/2	180
BH-6"	1-1/2	2	19-1/2	9-7/8	11	14-1/2	7	10-1/8	1/2	1/2	350
BH-8"	2	2-1/2	22-1/2	11-1/2	13	16-1/2	8-1/2	12-1/4	3/4	3/4	650

- 1 A = Mounting Bolt Diameter
 2 Star Indicates Two Bolt Mount
 3 Air Inlet Connection (N.P.T.)

