


VET-160 SINGLE POINT TIMER

OPERATING INSTRUCTIONS

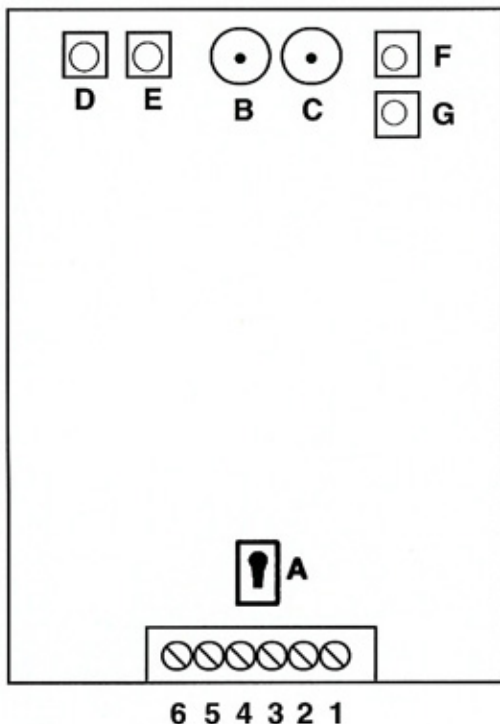

VET - 160 — This unit operates one output through a variable time cycle.

- A — Power Switch
- B — Off Time Adjustment
- C — On Time Adjustment
- D, E — Off Time Jumper
- F, G — On Time Jumper
- 1, 2 — Power Input Terminals
- 3, 4 — Output Terminals
- 5, 6 — Remote Terminals

SPECIFICATIONS: VET - 160

Time Range: ON 1.5 Sec. – 60 Min.
 OFF 1.5 Sec. – 60 Min.

Outputs: 1 @ 120 V.A.C., 1 Amp

Input: 120 V.A.C./60 Cycle

Operating Temp. Range: -20°F to + 130°F

Dimensions: 6 x 8 x 3.5

Repeatability: \pm 2%

INSTALLATION INSTRUCTIONS:

1. Connect output leads to terminals 3 & 4, common to terminal 4.
2. Connect 120 V.A.C. power source to terminals 1 & 2, neutral to terminal 2.
3. If desired, connect remote switch leads to terminals 5 & 6.
4. Time range selection:
 - a. For "ON" time range of 1 min. to 1 hr., connect jumper from terminal F to G.
 - b. For "ON" time range of 1.5 sec. to 1 min., disconnect jumper from terminal F to G.
 - c. For "OFF" time range of 1 min. to 1 hr., connect jumper from terminal D to E.
 - d. For "OFF" time range of 1.5 sec. to 1 min., disconnect jumper from terminal D to E.
5. Turn unit "ON" using power switch A.
6. Adjust "OFF" and "ON" times within the selected range using dials B and C, respectively.

Huntsman, Inc. ▼ 2362 Warren Ave. ▼ Twin Falls, Idaho 83301

(877) 733-2214 ▼ (208) 733-2214 ▼ Fax (208) 733-2240

www.huntsmaninc.com ▼ mail@huntsmaninc.com